POOLMASTER®
WE MAKE WATER FUN!
P.O. Box 340308
Sacramento, CA 95834-0308

POOLSIDE SHOWER

ITEM NO. 52508
ASSEMBLY INSTRUCTIONS

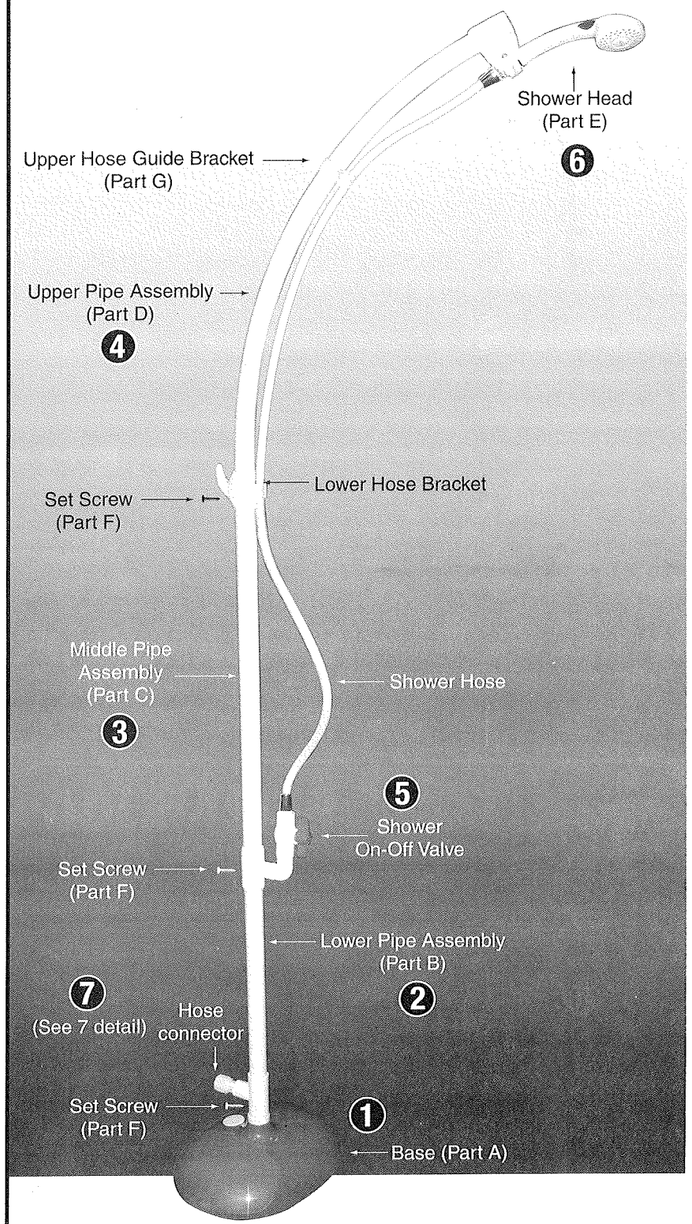

1. Fill the Support Base (Part A) with water or sand and insert the Base Cap (Part A-1).
2. Insert the Lower Pipe Assembly (Part B) into the Base and secure with Set Screw.
3. Insert the Middle Pipe Assembly (Part C) into the Lower Pipe Assembly and secure with Set Screw.
4. Insert the Upper Pipe Assembly (Part D) into the Middle Pipe Assembly and secure with Set Screw.
5. Attach Shower Hose to Shower On/Off Valve (Shower Hose threads come with teflon tape pre-applied).
6. Mount Shower Head (Part E) to Bracket on top of Upper Pipe Assembly and snap hose into Hose Guide Brackets.
7. Remove quick connector by sliding sleeve in direction shown to release spring tension. Attach garden hose to the connector and re-attach quick connector by sliding over o-ring and twisting to lock in position.

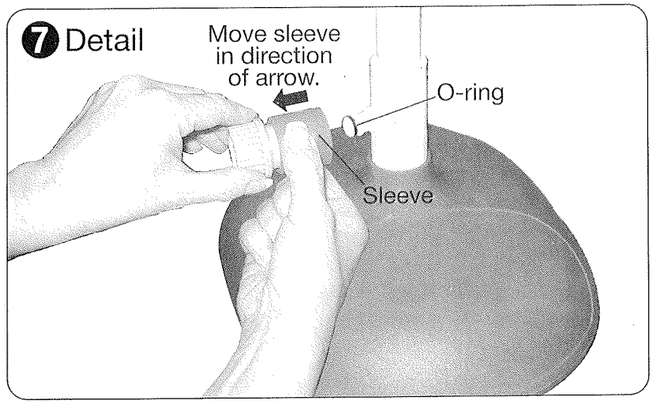

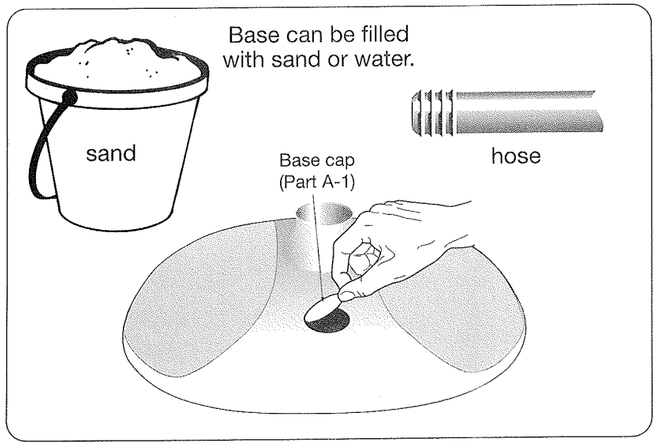

PARTS LIST

1 pc. - Support Base (Part A)
1 pc. - Base Cap (Part A-1)
1 pc. - Lower Pipe Assembly (Part B)
1 pc. - Middle Pipe Assembly (Part C)
1 pc. - Upper Pipe Assembly (Part D)
1 pc. - Shower Head (Part E)
3 pc. - Set Screws (Part F)
1 pc. - Upper Hose Guide Bracket (Part G)
1 pc. - O-Ring (installed)
1 pc. - Quick Connector with washer

TOOLS REQUIRED

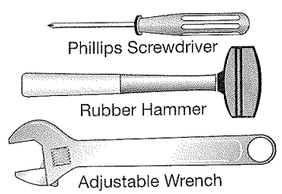

NEED ASSISTANCE?
Call our Consumer Service Line
800-854-1492
See our web page @ http:/www.poolmaster.net
e-mail address:customerservice@poolmaster.net

© POOLMASTER, INC.

770 W. Del Paso Rd.
Sacramento, CA 95834-0308